


Fitting instruction
Montageanleitung
Monteringsvejledning
Monteringsvægledning
Montagehanleiding
Manuel de montage


060:

1 - 6 + 11

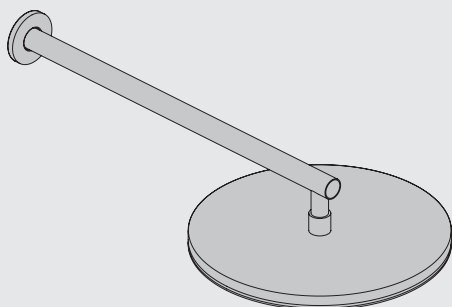

060A:

7 - 11

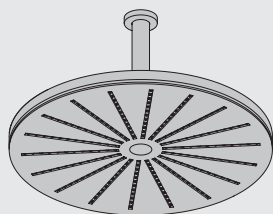

Data	Bar:	1	2	3	4	5
	(l/min)	12	18	22	25	29
	(Gal/min)	3.4	4.8	5.8	6.6	7.7

Max. 65°C. 150°F

VR161 - 060, 060A:
 VR161K: 1.8 Gal/min - 7 l/min
 VR161D: 2.5 Gal/min - 9 l/min
 VR161F: 3.7 Gal/min - 14 l/min

VR161K VR161D VR161F

3 + 10

VR648

060

200: 393 mm 15 1/2" -100: 493 mm 19 1/2" Std.: 593 mm 23 3/8"

200: 250 mm 9 7/8" -100: 350 mm 13 3/4" Std.: 450 mm 17 3/4"

80 mm 3 1/8"

Ø70 mm Ø2 3/4"

Ø286 mm Ø11 1/4"

1

Ø50 mm Ø2"

24 mm

2

3

VR161F: 14 l/min 3.7 Gal/min

4

4 - 8 mm 1/8" - 3/8"

2,5 mm

5



6 + 11

2,5 mm

1 + 2


3 + 4

1



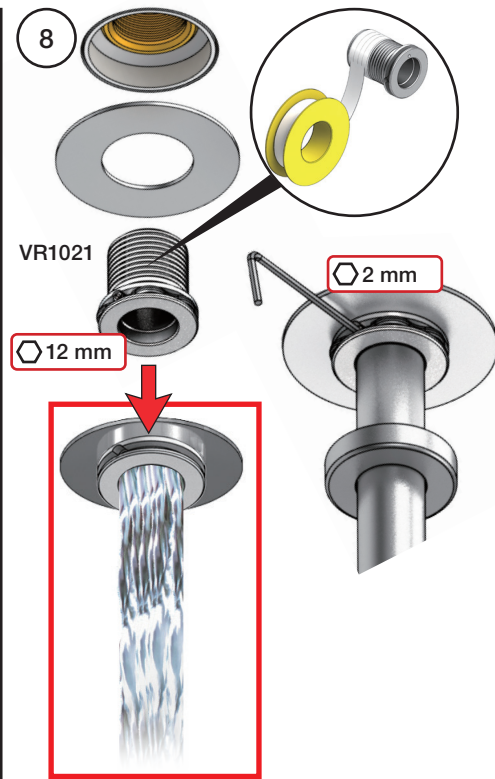
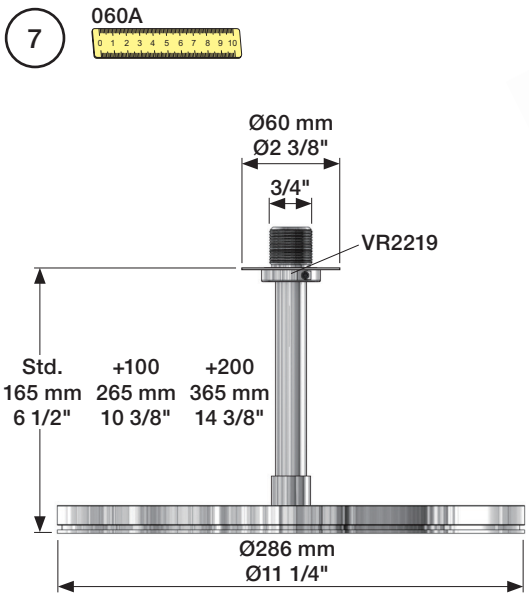



Locking screw
Sicherungsschraube
Sikringskrue

Fästskruv
Borgschroef
Vis de verrouillage

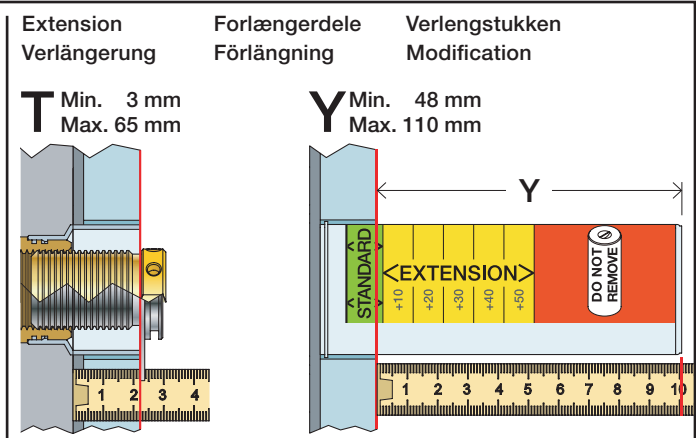

T: VR2219	T: VR648	Y	
3 - 15 mm	3 - 19 mm	110 - 98 mm	Std.
15 - 25 mm	17 - 28 mm	98 - 88 mm	+10
25 - 35 mm	27 - 38 mm	88 - 78 mm	+20
35 - 45 mm	37 - 48 mm	78 - 68 mm	+30
45 - 55 mm	47 - 58 mm	68 - 58 mm	+40
55 - 65 mm	57 - 68 mm	58 - 48 mm	+50

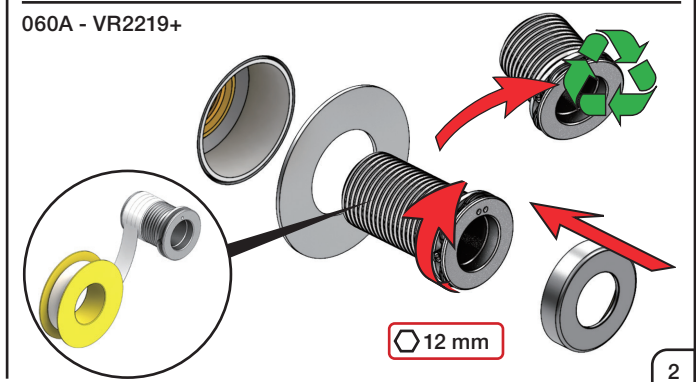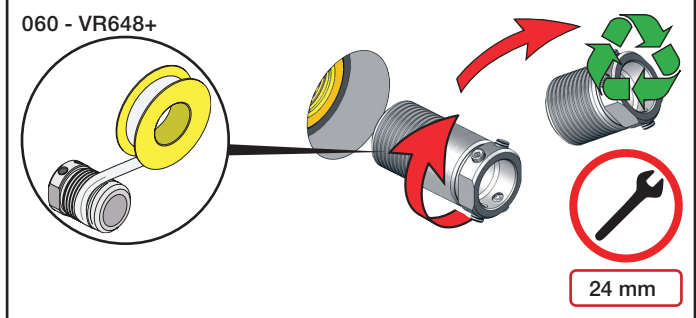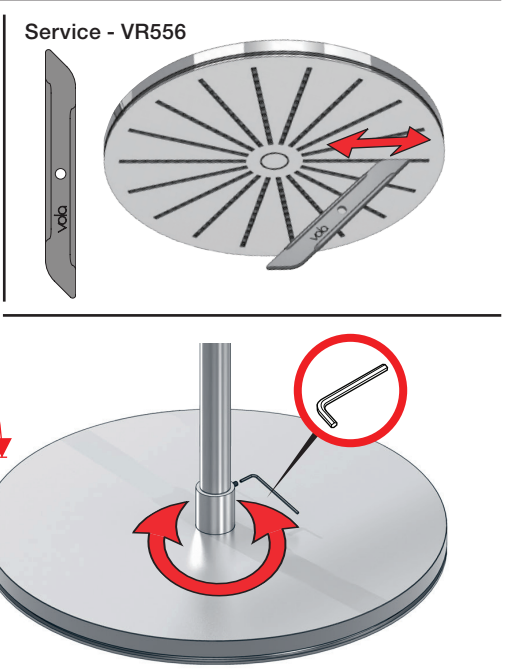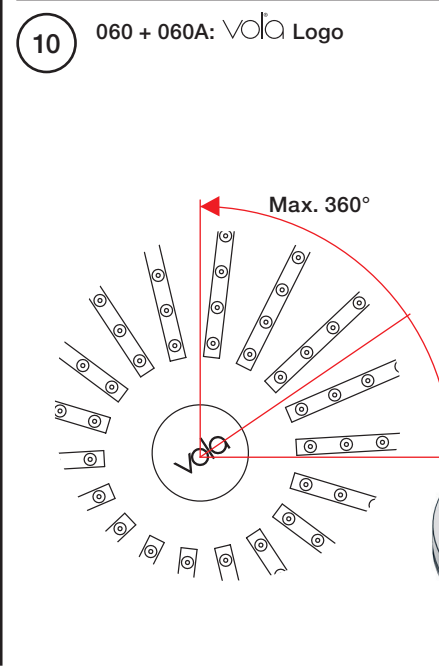

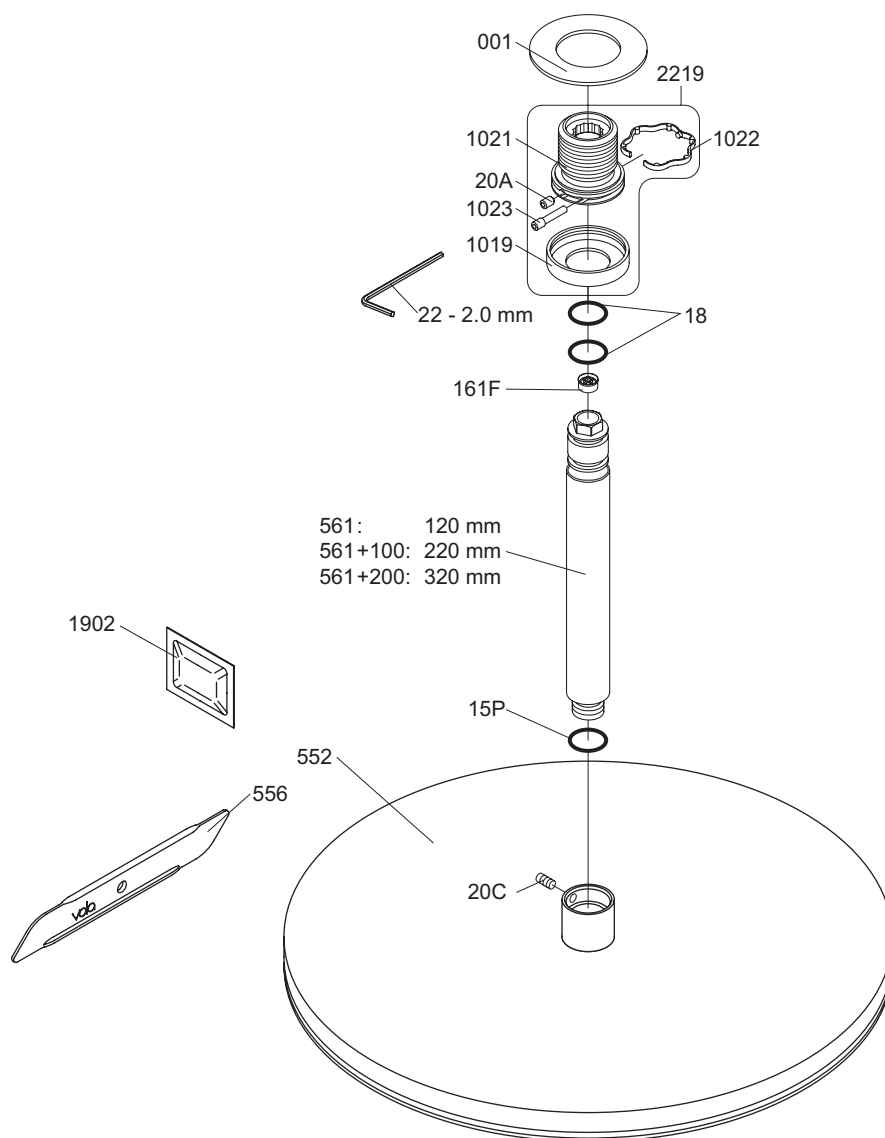

VR1021K: VR20A, VR22, VR1021, VR1022
VR2219: VR20A, VR22, VR1019, VR1021, VR1022, VR1023



vola
Lunavej 2
DK-8700 Horsens
Tlf : + 45 7023 5500
sales@vola.com
www.vola.com

VOLA 060A

Date
Apr. 21

Rev.
2

Sheet
SB 15.2