


VOLA 5100, 5100X, 5200V, 5300
VOLA 5400DV, 5400V, 5400NV, 5400TV & A3/A4
VOLA 5400FV, 5400RV, 5600V & A3/A4
VOLA 5400RVX, 5400TVX & A3/A4

Monteringsvägledning

NB.
Boxen leveraras inte av VOLA.
Utan köps genom ÅF eller Grossist.

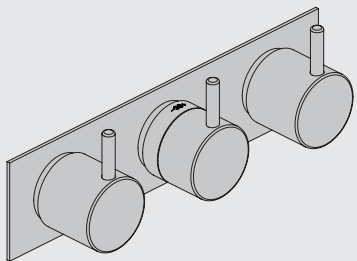

www.vola.com

SE_5000_V2 40998365
14-01-2022



vola

Max.: 10 Bar/145 psi

Max. 65°C, 150°F

5100/5200V/5300:



5400/5600A3:



- C

Data, l/min. / (Gpm) 3 Bar/43.5 Psi:

5400/5600:




5400/5600A4:



- D


5400 5600	5400A3 5600A3	5400A4 5600A4							
Out 2	Out 1	Out 1	32/(8.5)	16/(4.2)	-	-	-	-	-
Out 3	Out 2	Out 2	-	-	32/(8.5)	16/(4.2)	-	-	-
-	Out 3	Out 3	-	-	-	-	32/(8.5)	16/(4.2)	-
-	-	Out 4	-	-	-	-	-	-	32/(8.5)

Installations exempel: 5400NV

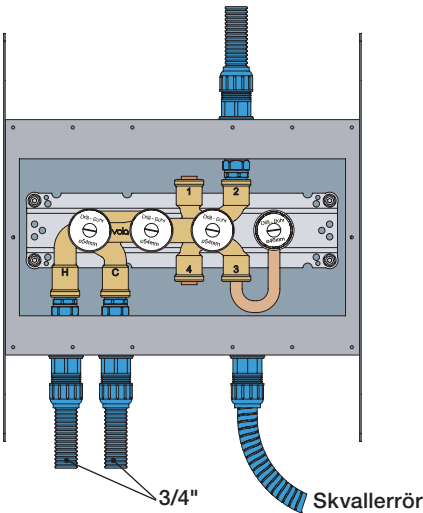


mm/Inch	L	L1	L2	L3	L4	H	H1	H2	H3
A	220 8 1/2"	-	-						
B	318 12 1/2"			60 2 3/8"		95 3 3/4"		130 5 1/8"	
C	396 15 1/2"	64 2 1/2"	78 3 1/16"		78 3 1/16"		127 5"		54 2 1/8"
D	474 18 1/2"				156 6 1/8"				


A: 5400DV/A3/A4

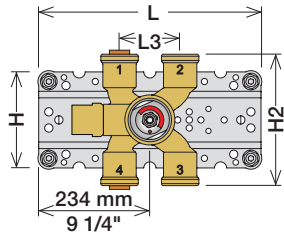


B: 5200V

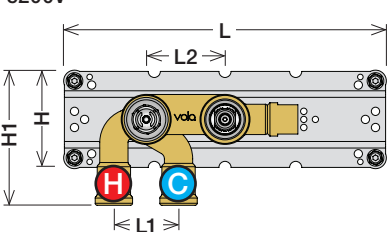


C: 5100X

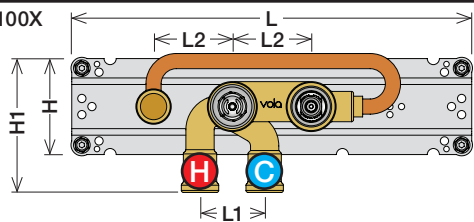


B: 5400V/A3/A4

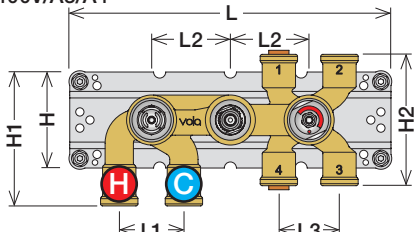


C: 5400TVX/A3/A4 - D: 5400RVX/A3/A4

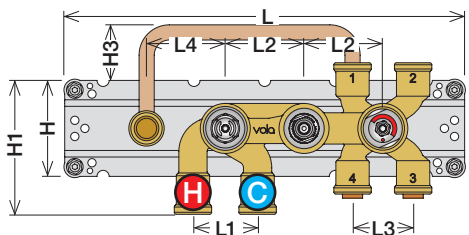


C: 5400TV/A3
D: 5400RV/A3

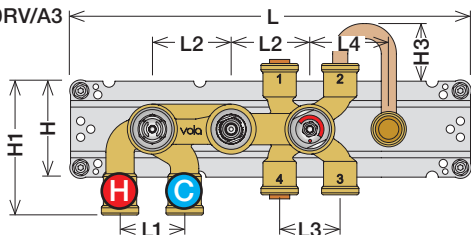


C: 5400NV/A3
D: 5400FV/A3

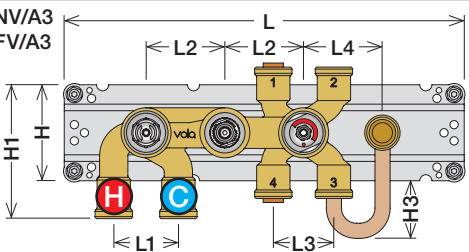


C: 5400NVA4
D: 5400FVA4

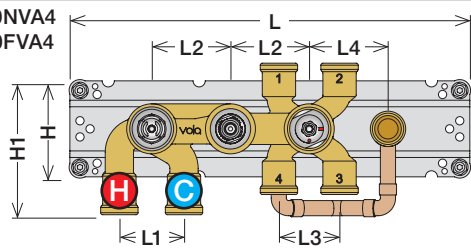


C: 5300

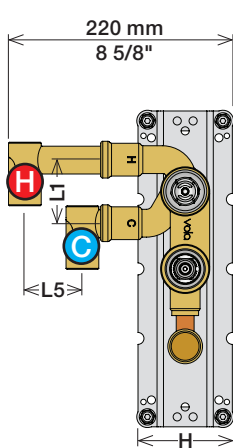

C: 5600V/A3/A4

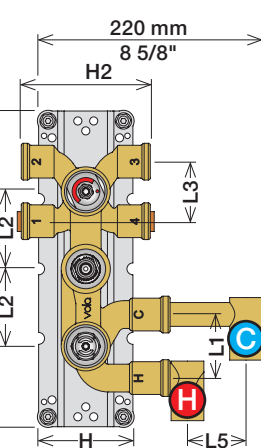


Förlängning

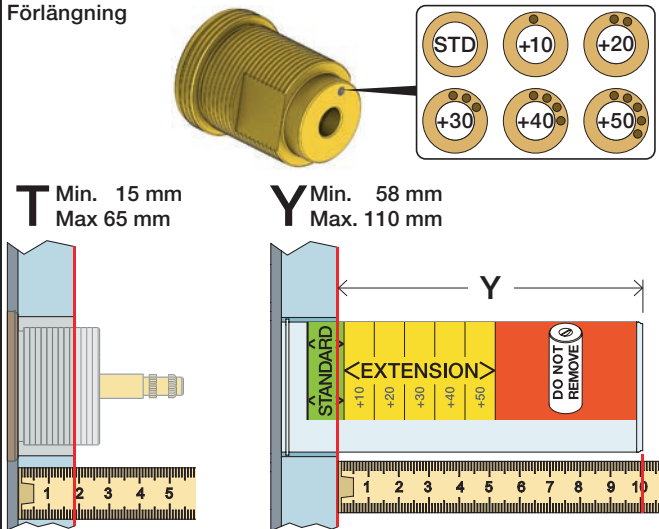

	T	Y	VR5250/VR5410/VR2019
	3 - 15 mm	110 - 98 mm	Std.
	15 - 25 mm	98 - 88 mm	+10 STANDARD SVERIGE
	25 - 35 mm	88 - 78 mm	+20
	35 - 45 mm	78 - 68 mm	+30
	45 - 55 mm	68 - 58 mm	+40
	55 - 65 mm	58 - 48 mm	+50


Förlängning, eftermontering

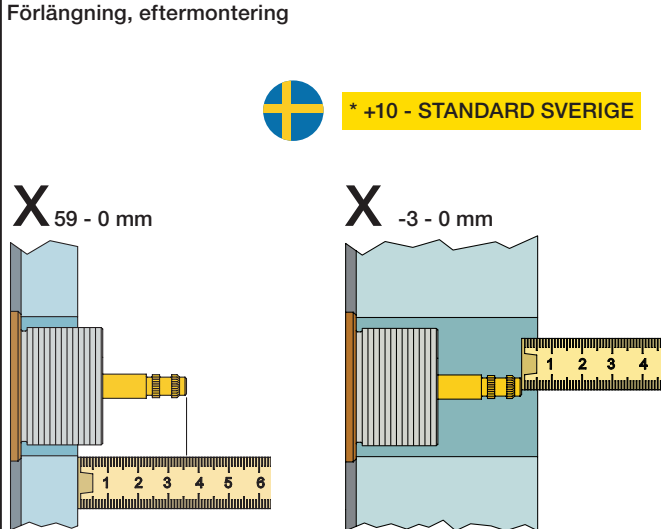


	X	VR5250/VR5410/VR2019
	47 - 59 mm	Std.
	37 - 47 mm	+10
	27 - 37 mm	+20
	17 - 27 mm	+30
	7 - 17 mm	+40
	-3 - 7 mm	+50

Montering av förlängning



VR5250

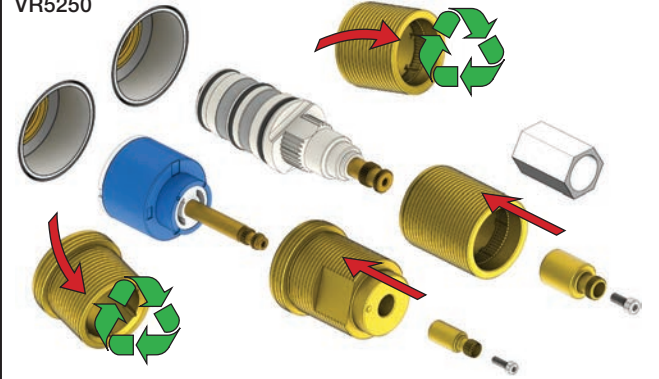

VR2019+, VR2119+







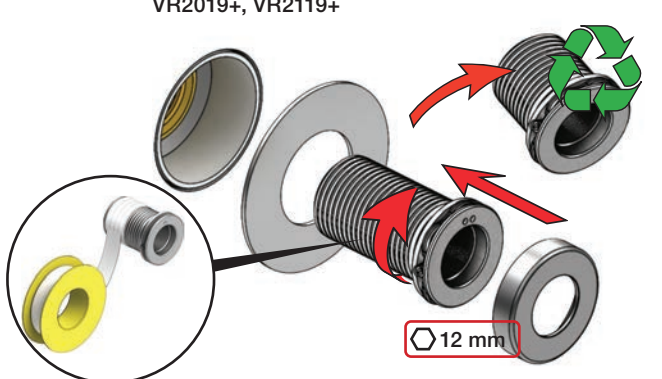


VR5410 IKKE 5100, 5100X, 5200V, 5300

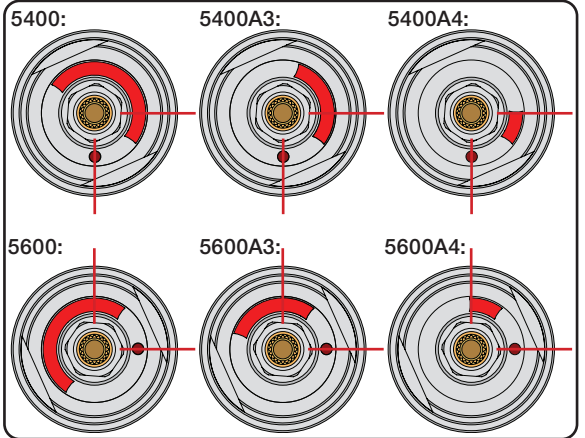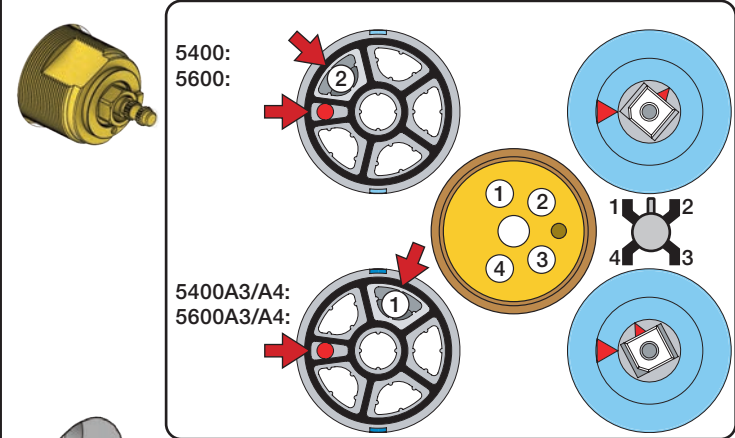

1 Demontera sidofixturerna.
Ta inte bort ljudisolering och Skyddskåpor.







NB.
Boxen leveraras inte av VOLA.
Utan köps genom ÅF eller Grossist.

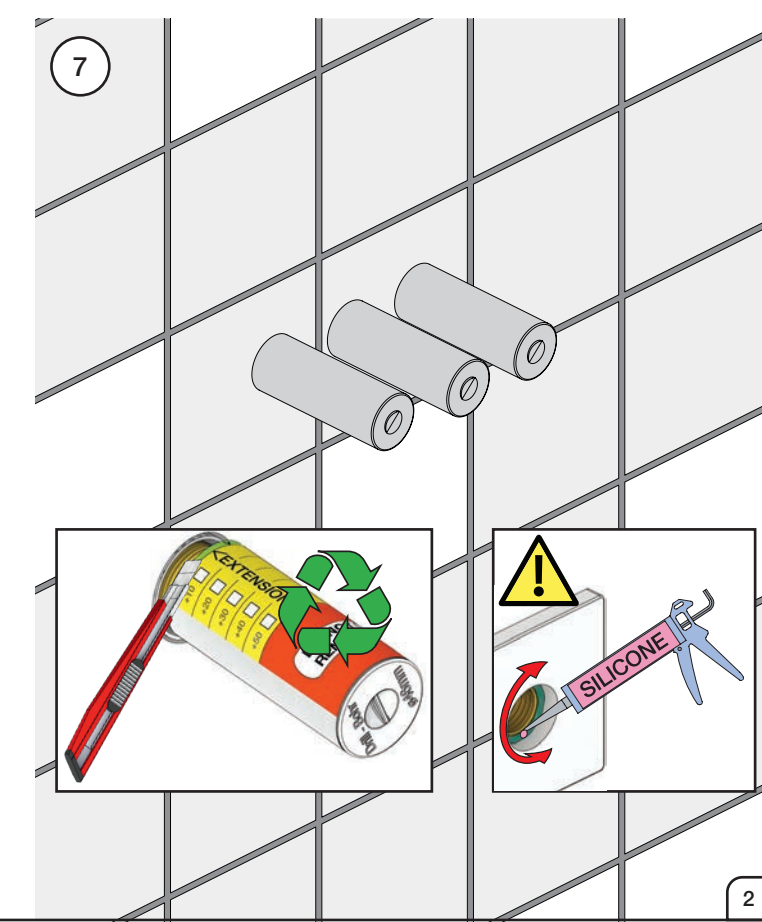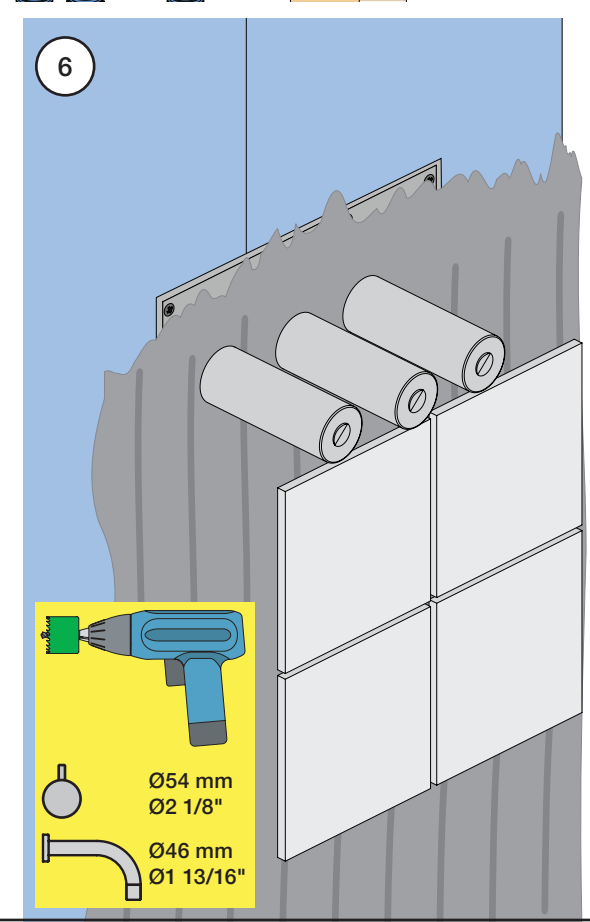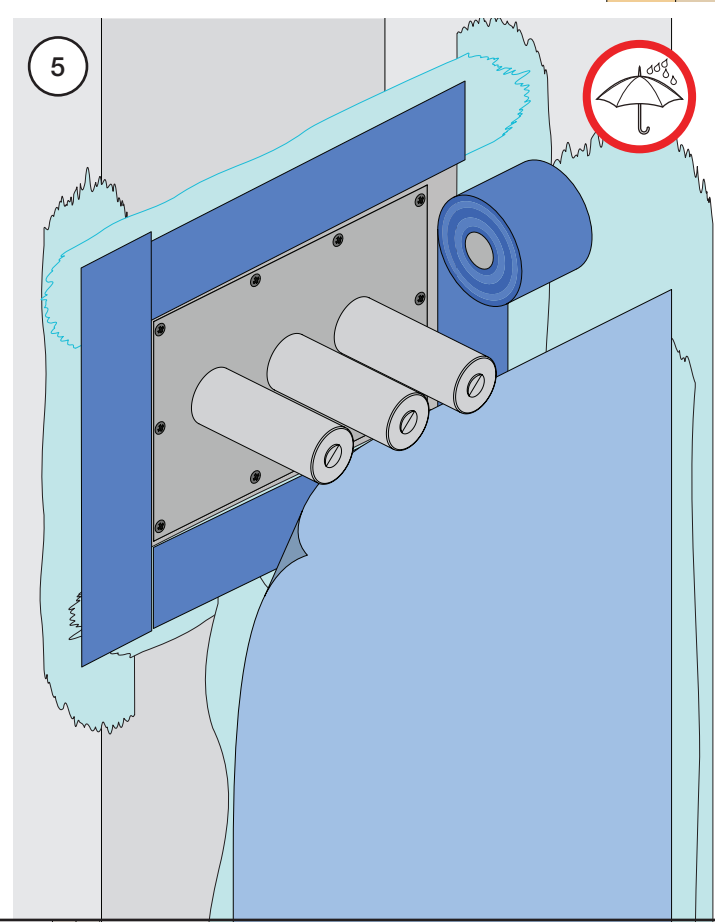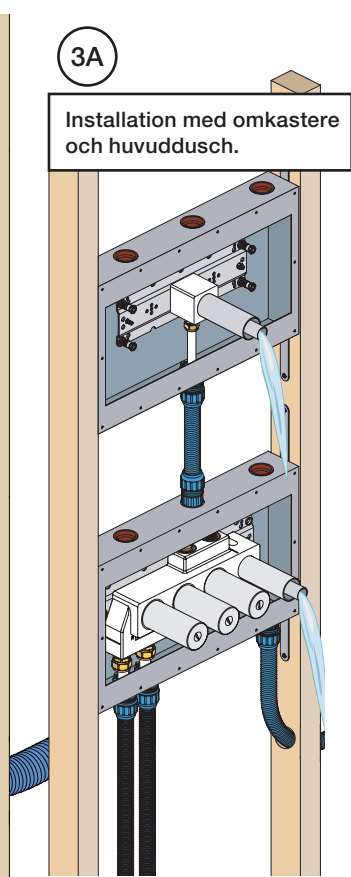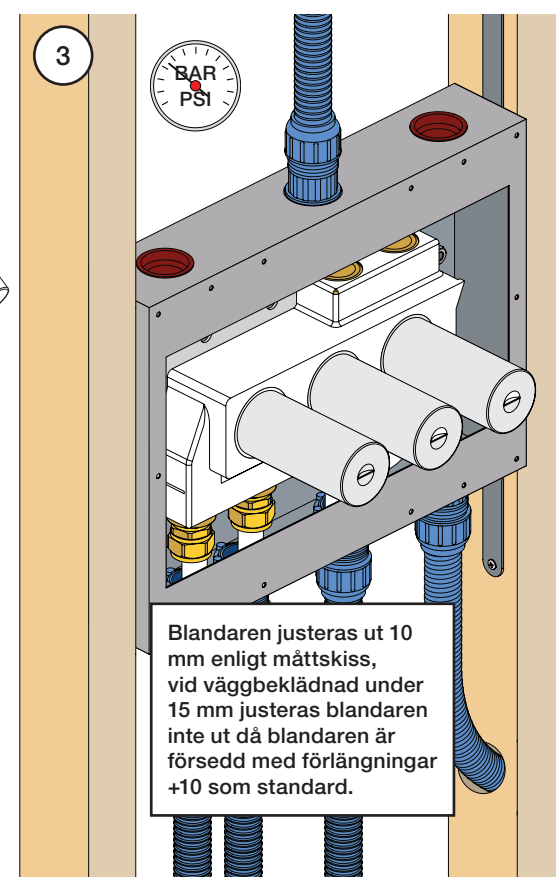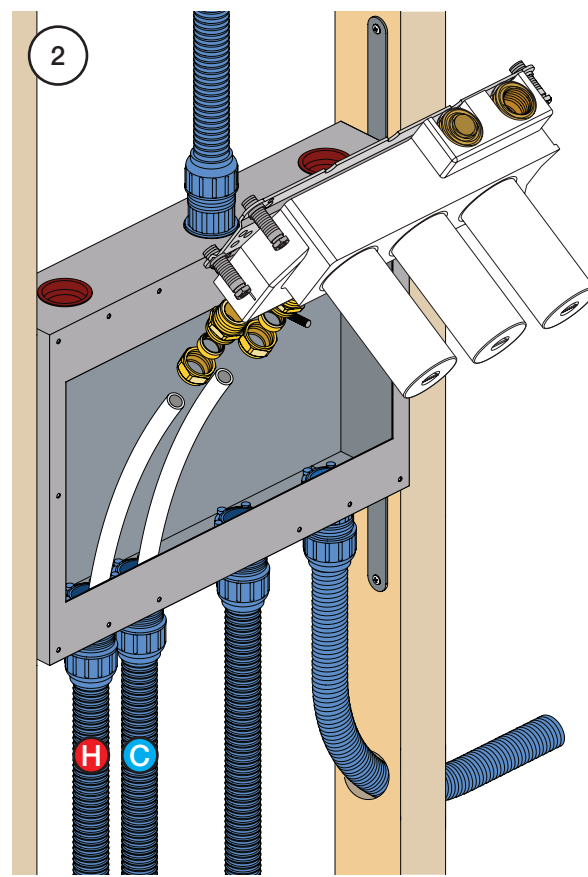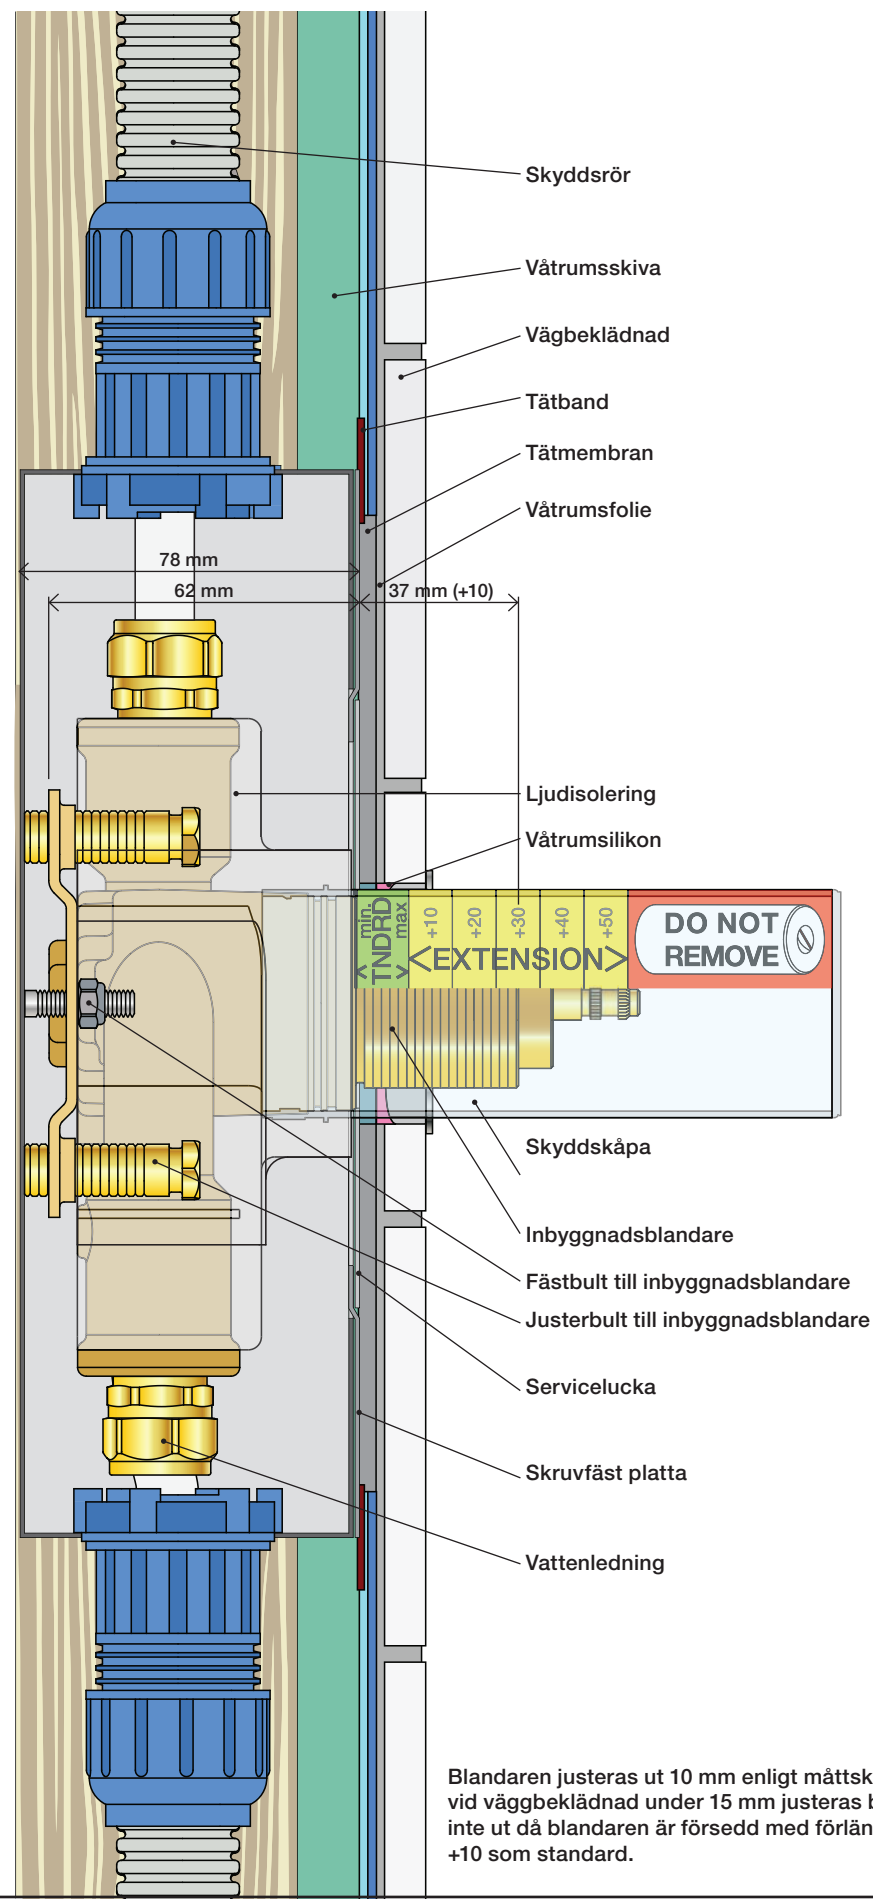

5400V

Exploded view diagram of a 5400V electrical component assembly. The diagram shows the main housing (5277LK) and various internal and external components. Key parts include:

- 5400V**: Main housing assembly.
- 5277LK**: Main housing component.
- 5270 NV32**: Internal component.
- 5271+**: Internal component.
- 5410**: Internal component.
- 5268**: Internal component.
- 5246**: Internal component.
- 5249**: Internal component.
- 5248**: Internal component.
- 5250**: Internal component.
- 5272**: Internal component.
- 5255**: Internal component.
- 5262**: Internal component.
- 5256**: Internal component.
- 5411**: Internal component.
- 969**: Internal component.
- 5269**: Internal component.
- 972**: Small circular component (x8).
- 968**: External component.
- 2C**: Internal component.
- 2279/B/C**: Internal component.
- 2279B**: Internal component.
- 2279**: Internal component.
- Nr.64**: Internal component.
- Nr.52**: Internal component.
- Nr.51**: Internal component.
- 2A***: Internal component.
- 3110**: Internal component.
- 3109**: Internal component.

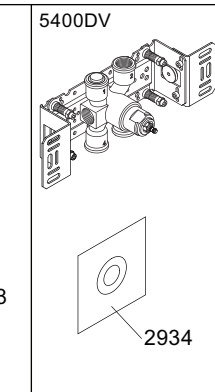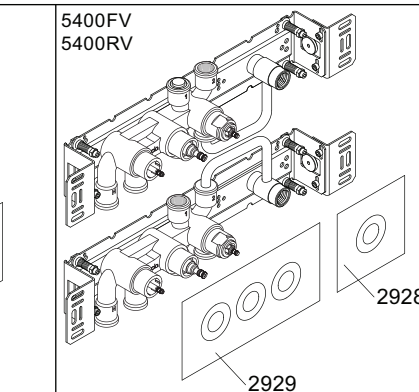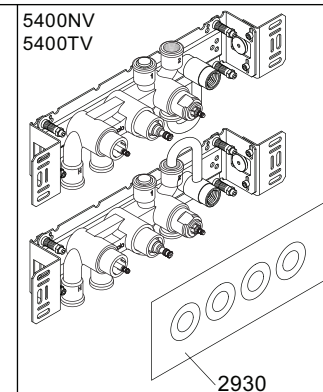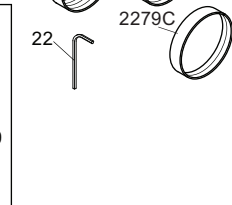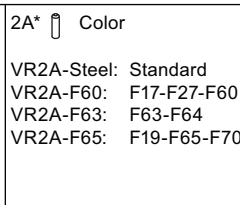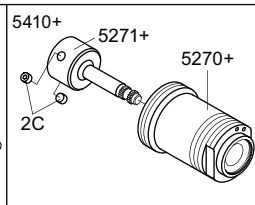

5004B

5004L

3x2001, 001

©
3x2001, 001

2001



Date
May 22

5

Sheet
SB 10.54