


VOLA 070, 070R, 070-HT2


Fitting instruction
Montageanleitung
Monteringsvejledning
Monteringsvægledning
Montage hanleiding
Manuel de montage





Data	Bar:	1	2	3	4	5
070/070R	(l/min) (Gal/min)	9 2.5	9 2.5	9 2.5	9 2.5	9 2.5
070-HT2	(l/min) (Gal/min)	9 2.5	12 3.2	15 4.0	17 4.5	19 5
	Max. 65°C. 150°F					

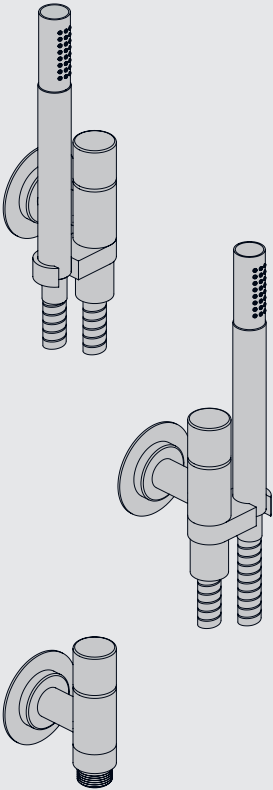



VR161:
VR161K: 7 l/min - 1.8 Gal/min (Cal Green)

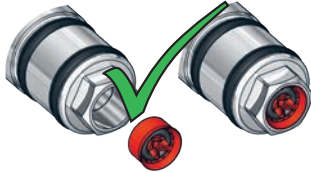


070


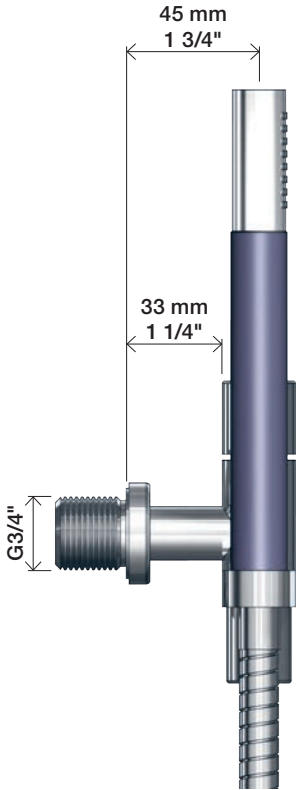
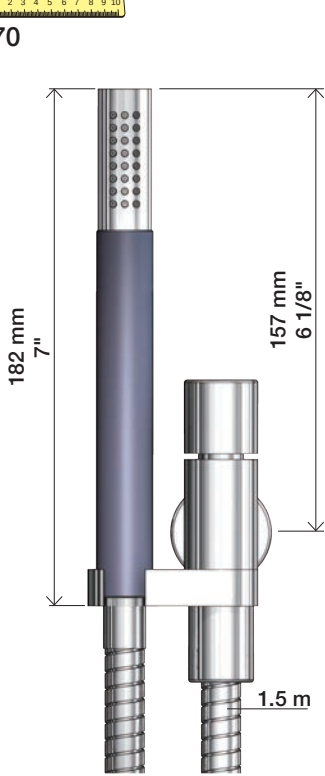


070R

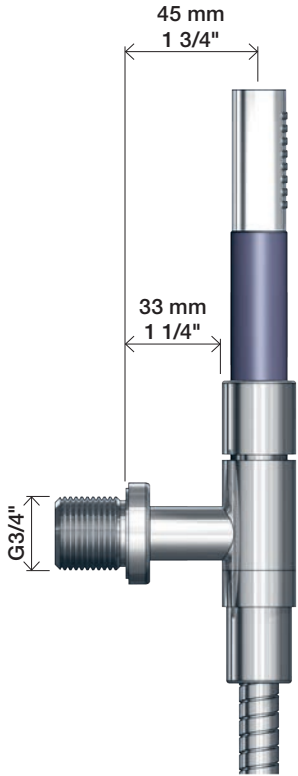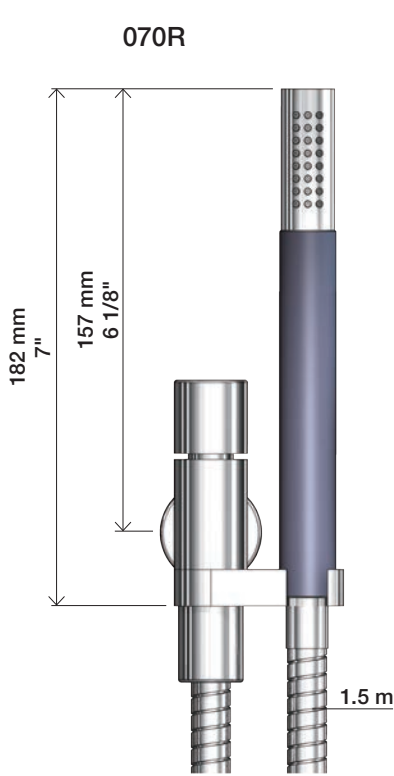

070-HT2

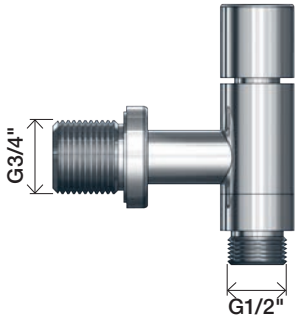

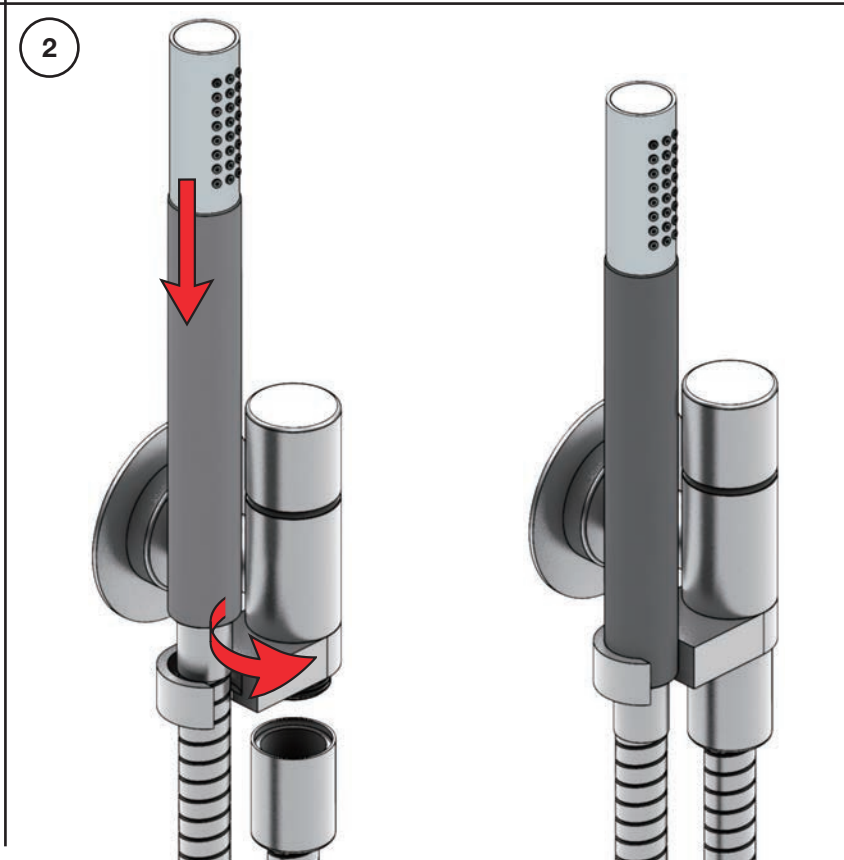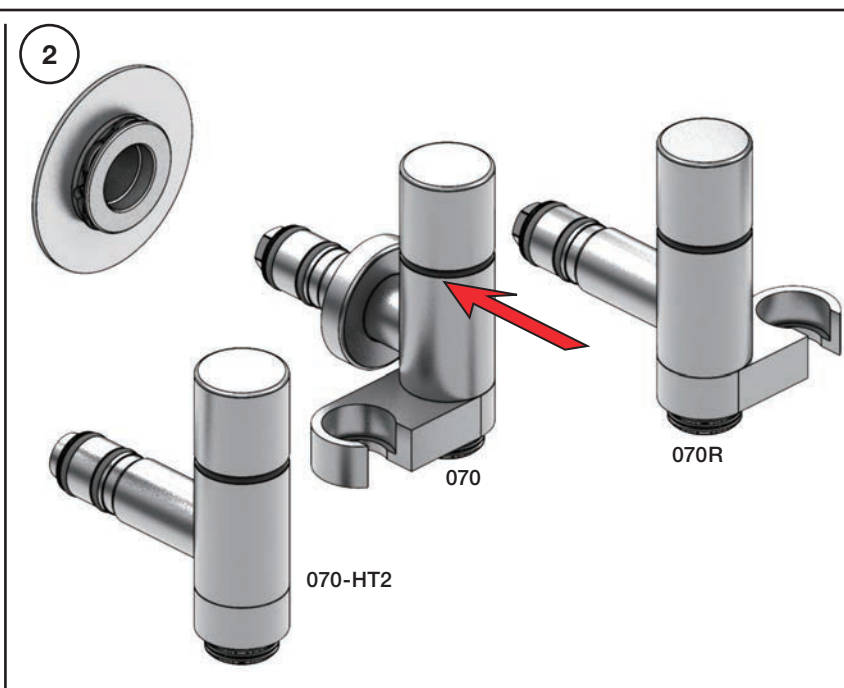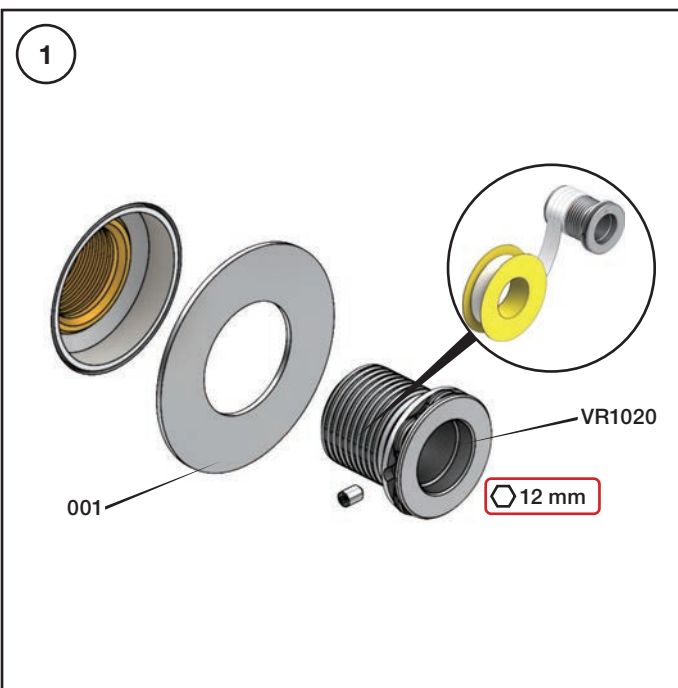


Extension
Verlängerung


Forlængerdele
Förlängning

Verlengstukken
Modification

T Min. 3 mm
Max. 65 mm

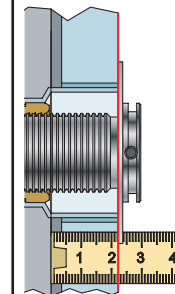


Y Min. 48 mm
Max. 110 mm

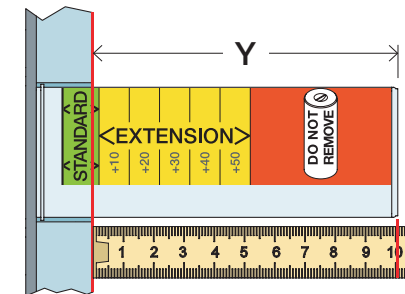

T	Y	VR2019
3 - 15 mm	110 - 98 mm	Std.
15 - 25 mm	98 - 88 mm	+10
25 - 35 mm	88 - 78 mm	+20
35 - 45 mm	78 - 68 mm	+30
45 - 55 mm	68 - 58 mm	+40
55 - 65 mm	58 - 48 mm	+50


VR2019+

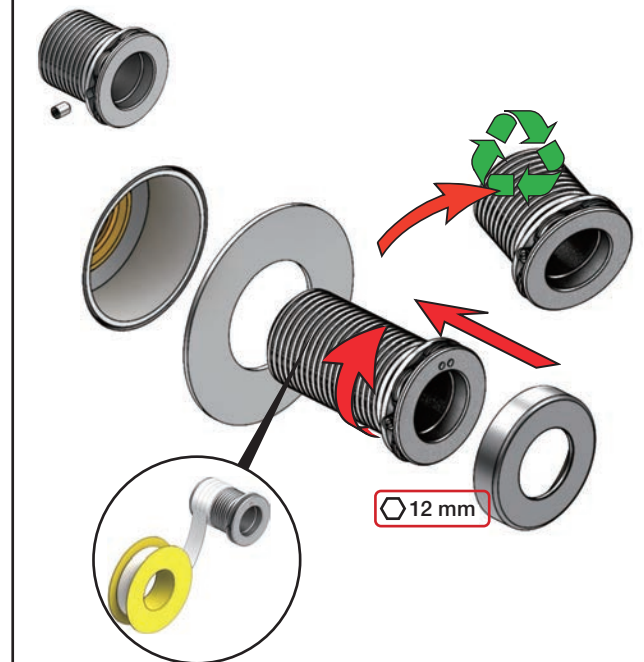

VOLA 5100, 5100X, 5200V, 5300
VOLA 5400DV, 5400V, 5400NV, 5400TV & A3/A4
VOLA 5400FV, 5400RV, 5600V & A3/A4
VOLA 5400RVX, 5400TVX & A3/A4

Monteringsvægledning

NB.
Boxen leveraras inte av VOLA.
Utan köps genom ÅF eller Grossist.

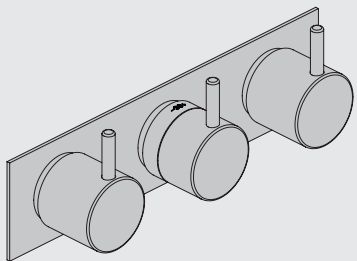

www.vola.com

SE_5000_V2 40998365
14-01-2022



vola

Max.: 10 Bar/145 psi

Max. 65°C, 150°F

5100/5200V/5300:



5400/5600A3:



- C

Data, l/min. / (Gpm) 3 Bar/43.5 Psi:

5400/5600:




5400/5600A4:



- D


5400 5600	5400A3 5600A3	5400A4 5600A4							
Out 2	Out 1	Out 1	32/(8.5)	16/(4.2)	-	-	-	-	-
Out 3	Out 2	Out 2	-	-	32/(8.5)	16/(4.2)	-	-	-
-	Out 3	Out 3	-	-	-	-	32/(8.5)	16/(4.2)	-
-	-	Out 4	-	-	-	-	-	-	32/(8.5)

Installasjonsexempel: 5400NV

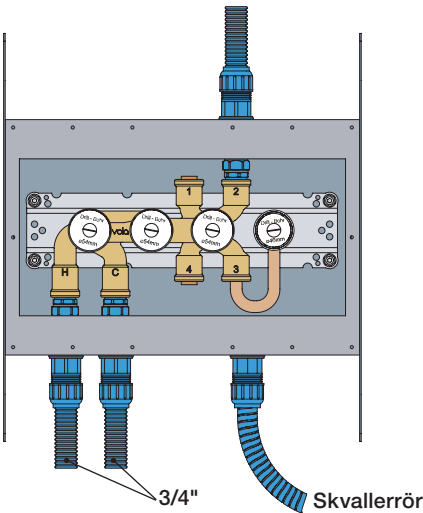


mm/Inch	L	L1	L2	L3	L4	H	H1	H2	H3
A	220 8 1/2"	-	-						
B	318 12 1/2"			60 2 3/8"		95 3 3/4"		130 5 1/8"	
C	396 15 1/2"	64 2 1/2"	78 3 1/16"		78 3 1/16"		127 5"		54 2 1/8"
D	474 18 1/2"				156 6 1/8"				


A: 5400DV/A3/A4

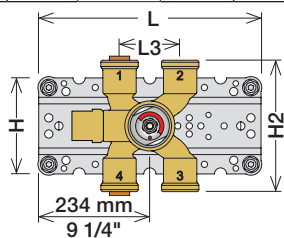


B: 5200V

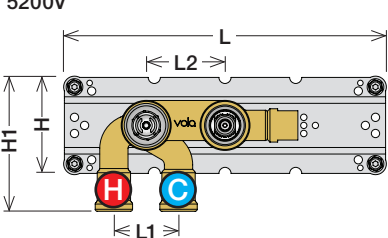


C: 5100X

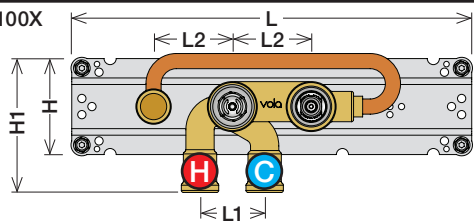


B: 5400V/A3/A4

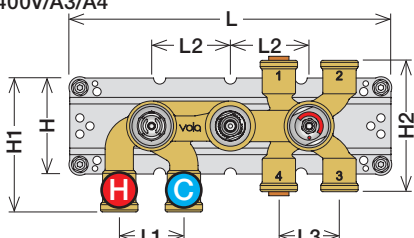


C: 5400TVX/A3/A4 - D: 5400RVX/A3/A4

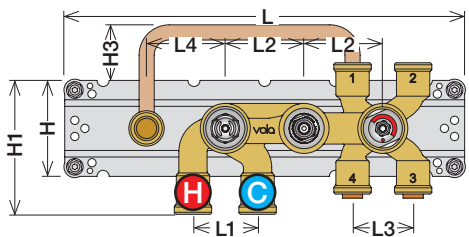


C: 5400TV/A3
D: 5400RV/A3

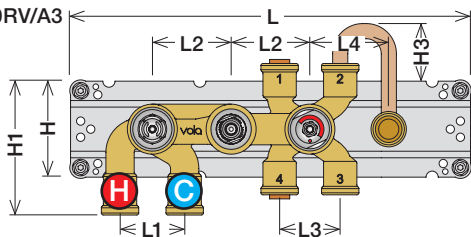


C: 5400NV/A3
D: 5400FV/A3

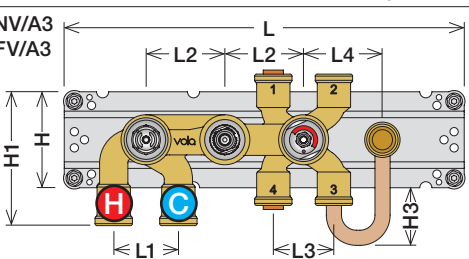


C: 5400NVA4
D: 5400FVA4

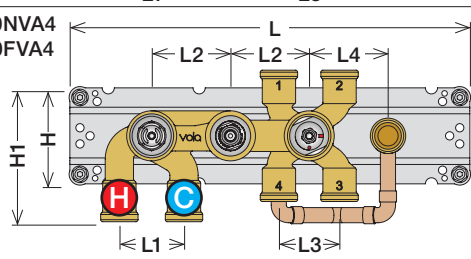


C: 5300

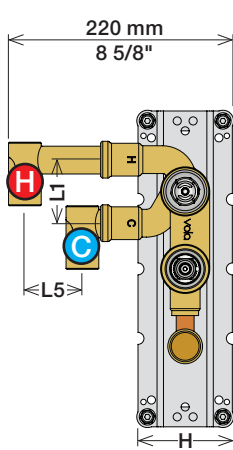

C: 5600V/A3/A4

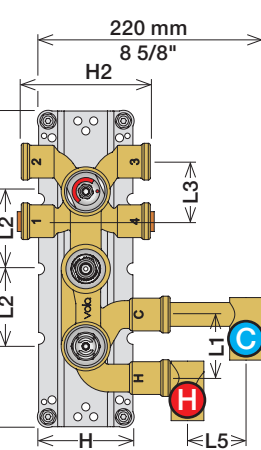


Förlängning

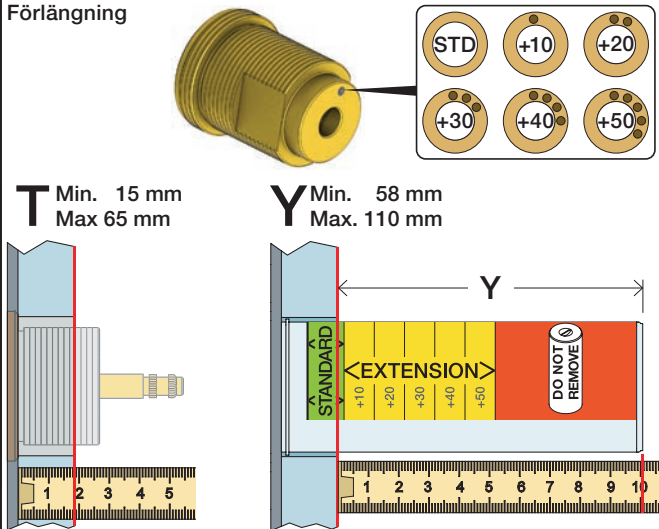

	T	Y	VR5250/VR5410/VR2019
	3 - 15 mm	110 - 98 mm	Std.
	15 - 25 mm	98 - 88 mm	+10 STANDARD SVERIGE
	25 - 35 mm	88 - 78 mm	+20
	35 - 45 mm	78 - 68 mm	+30
	45 - 55 mm	68 - 58 mm	+40
	55 - 65 mm	58 - 48 mm	+50


Förlängning, eftermontering

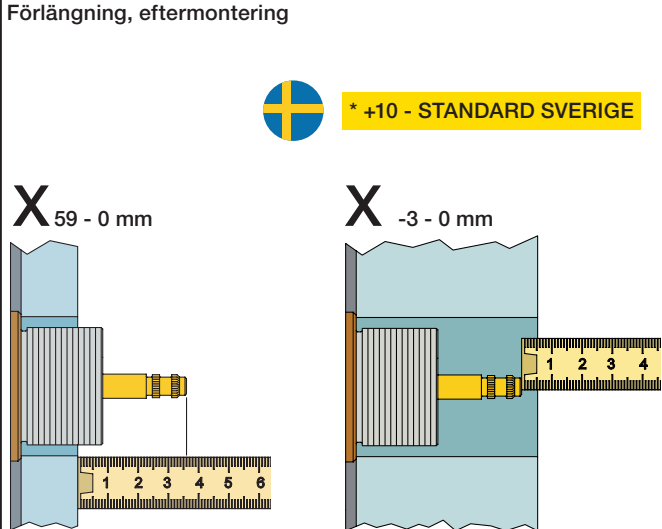


	X	VR5250/VR5410/VR2019
	47 - 59 mm	Std.
	37 - 47 mm	+10
	27 - 37 mm	+20
	17 - 27 mm	+30
	7 - 17 mm	+40
	-3 - 7 mm	+50

Montering av förlängning




VR5250

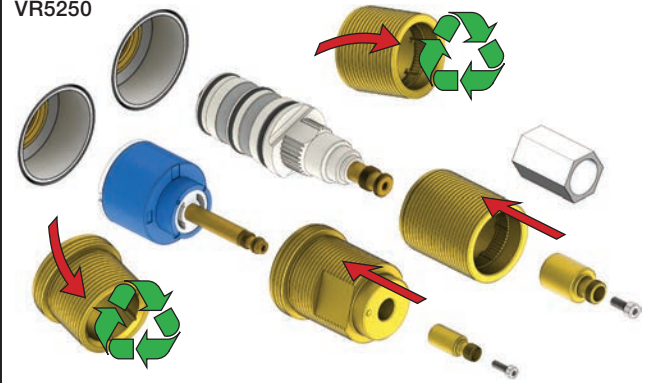

VR2019+, VR2119+









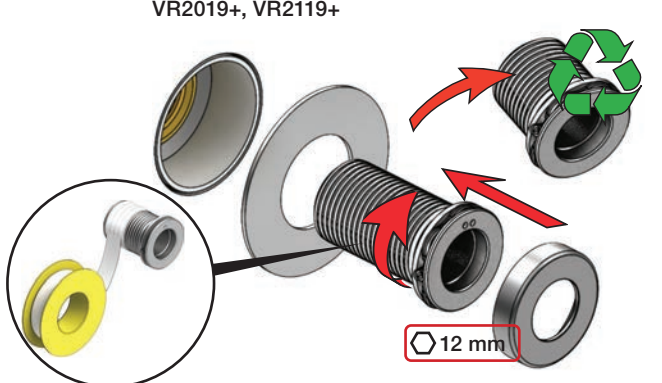


VR5410 IKKE 5100, 5100X, 5200V, 5300

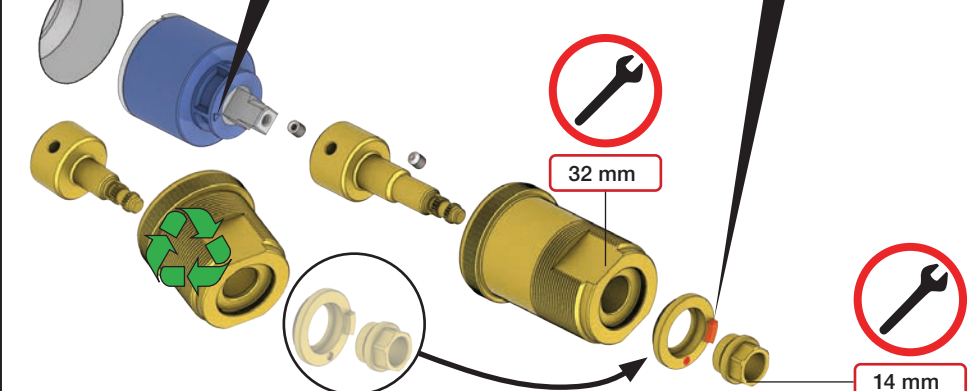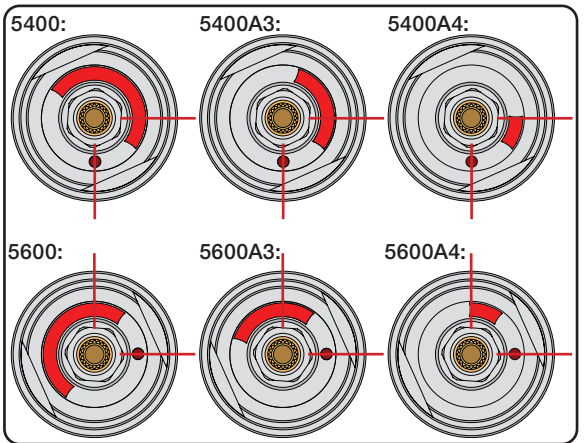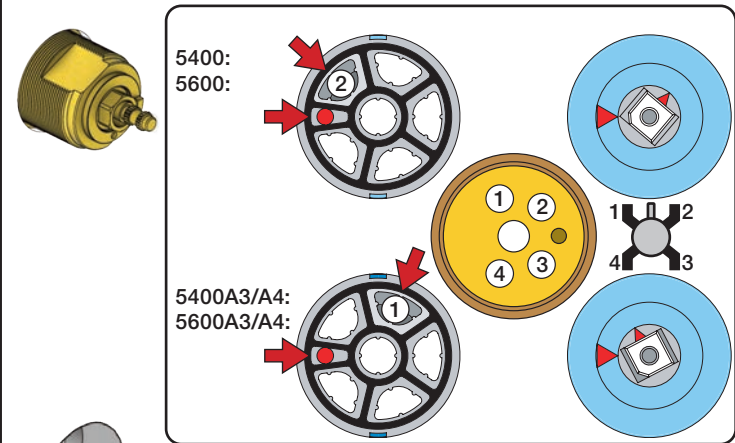

1 Demontera sidofixturerna.
Ta inte bort ljudisolering och Skyddskåpor.

NB.
Boxen leveraras inte av VOLA.
Utan köps genom ÅF eller Grossist.

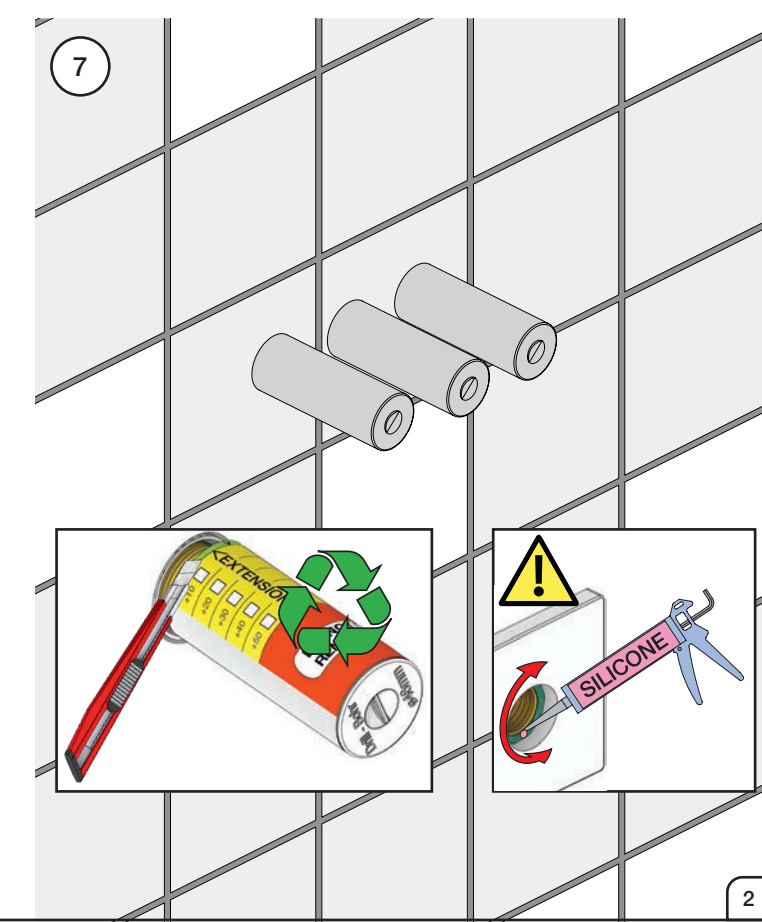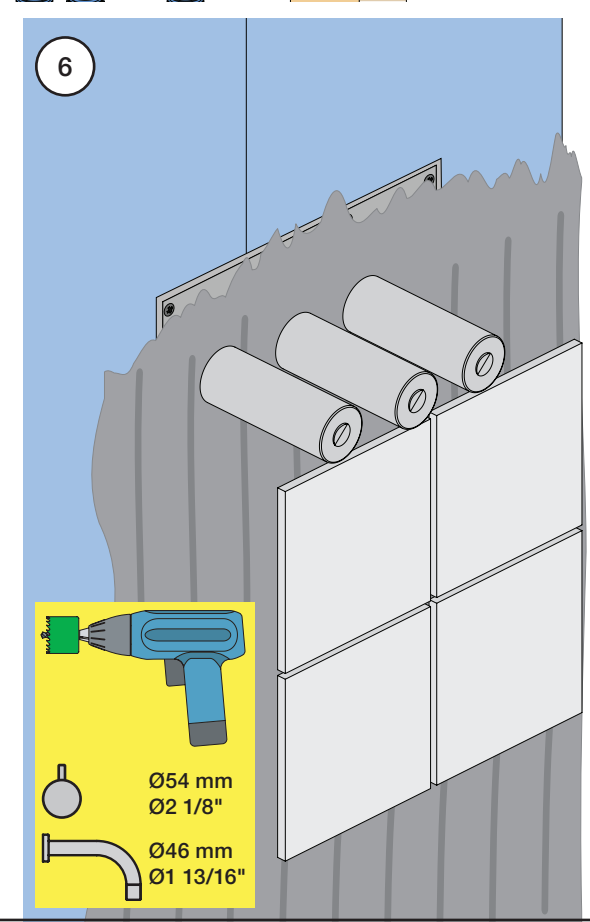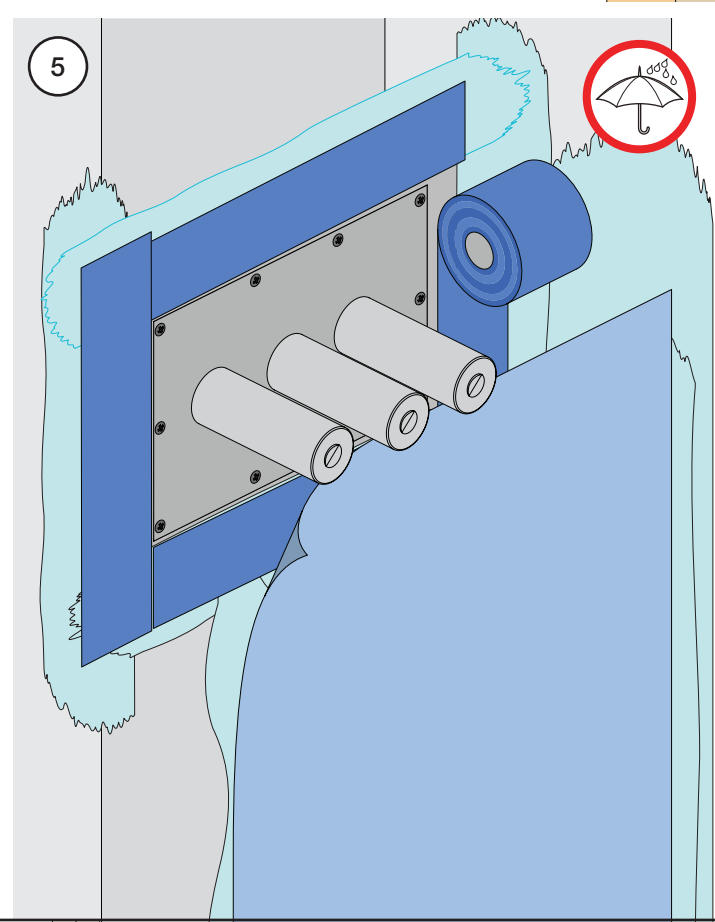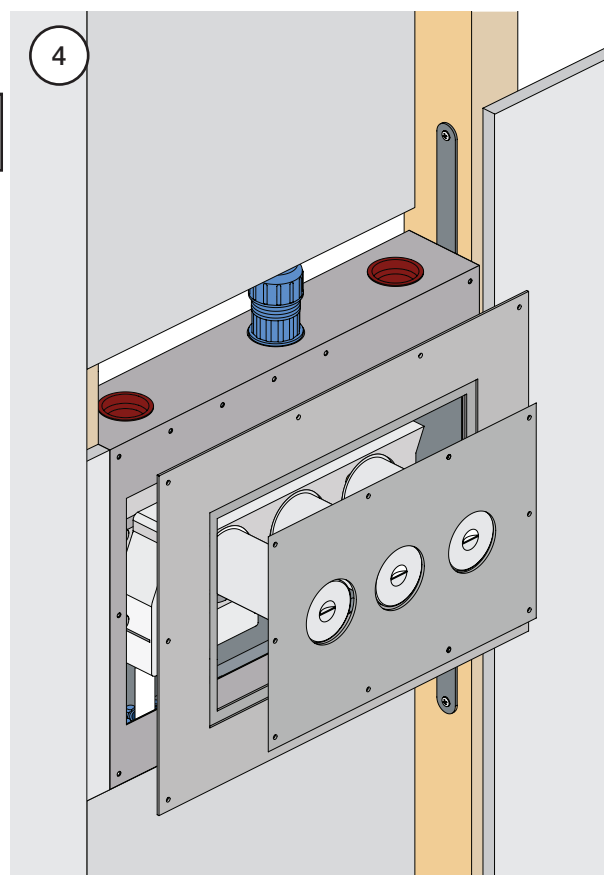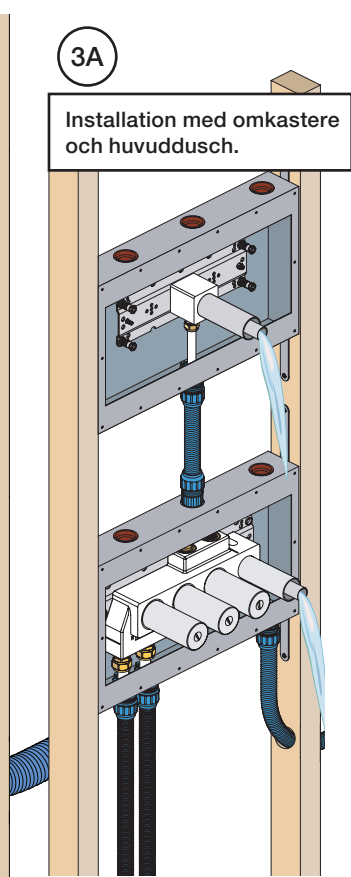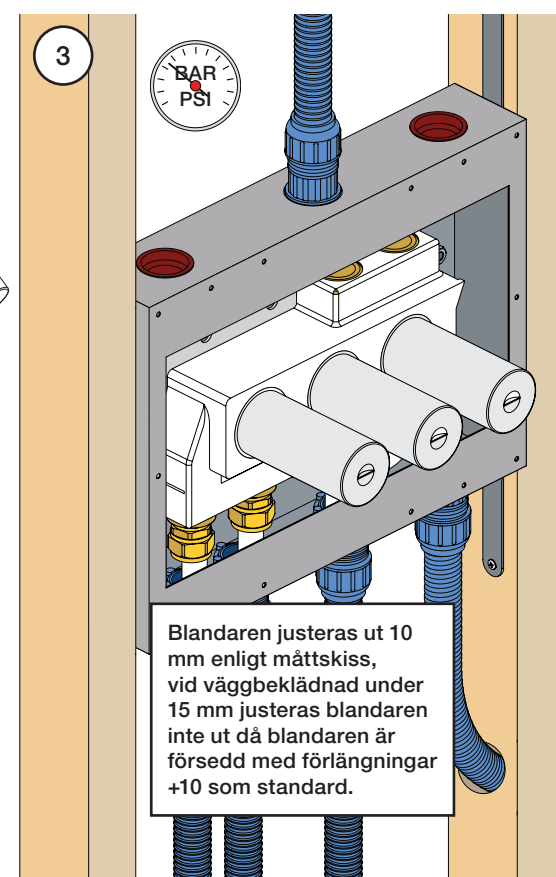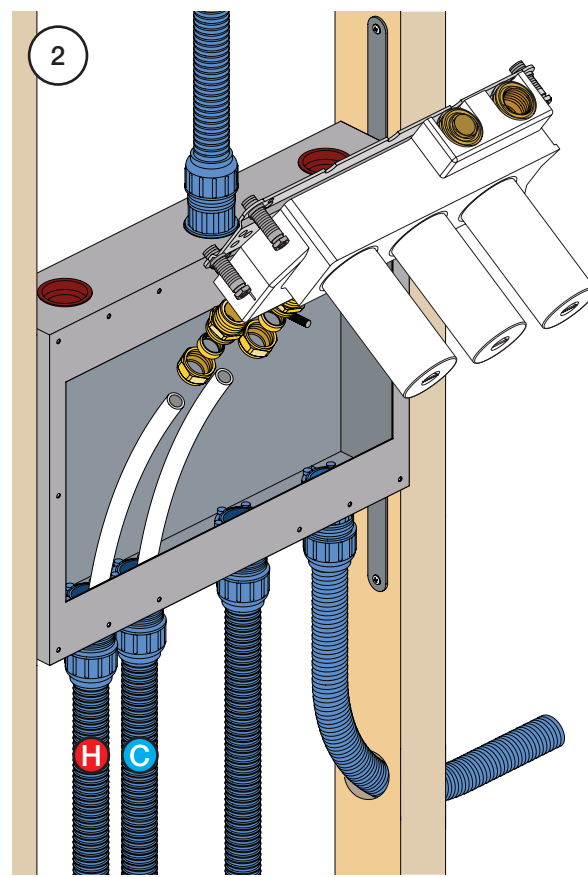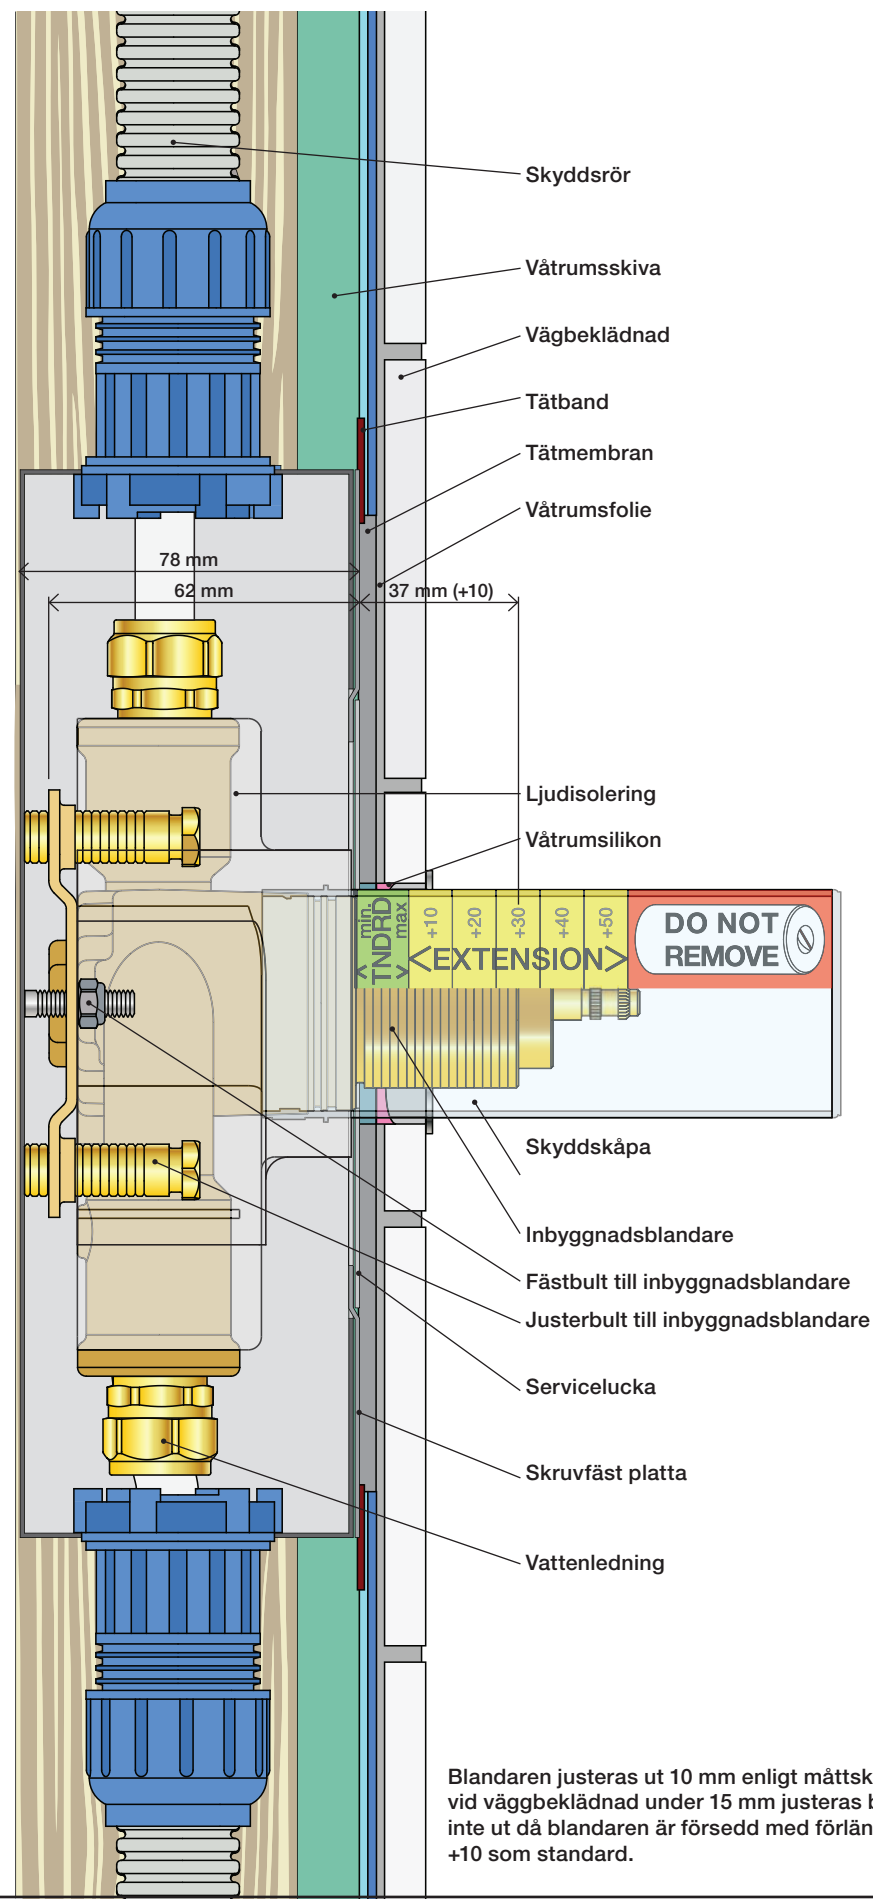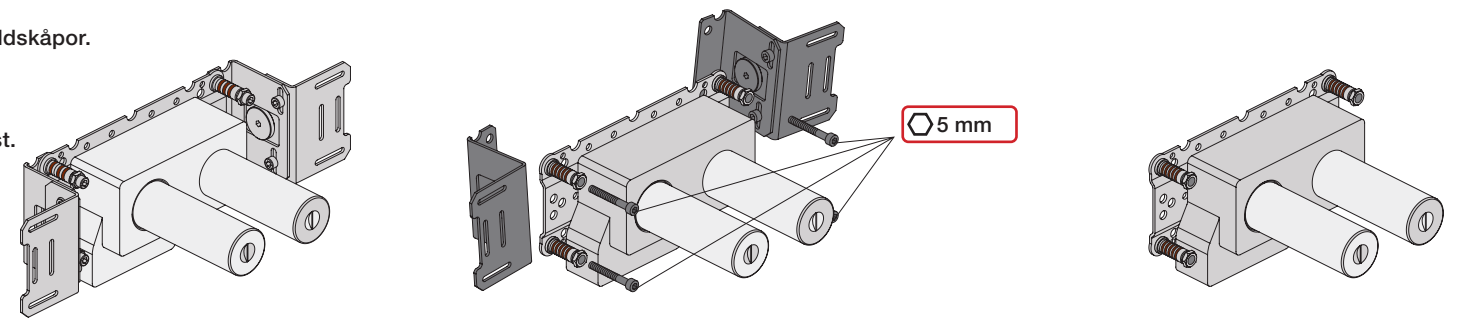

Blandaren justeras ut 10 mm enligt måttskiss,
vid väggbeklädnad under 15 mm justeras blandaren
inte ut då blandaren är försedd med förlängningar
+10 som standard.



Do not cut the membrane
Die Membran nicht schneiden
Skær ikke membranen
Skär inte membranet
Snij het membraan niet door
Ne coupez pas la membrane
No cortar la membrana

NR.51:


1

NR.52+64:


2

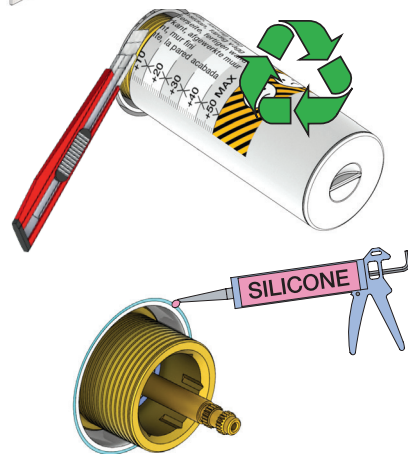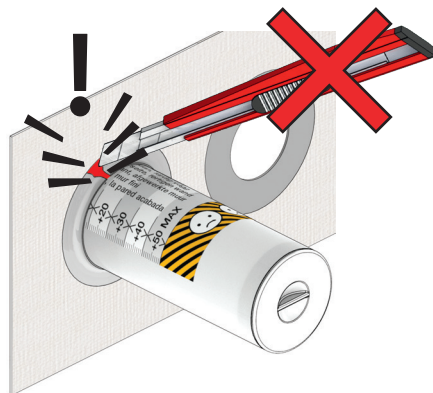

NR 51

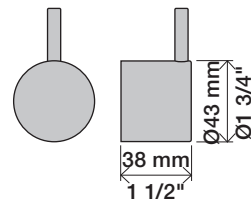

NR 51 - 1

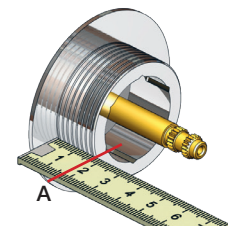

VR2279


VR2279B

VR2279C




		A
VR2279	16 mm	16 - 22 mm
VR2279B	12 mm	12 - 18 mm
VR2279C	8 mm	8 - 15 mm

NR 51 - 2

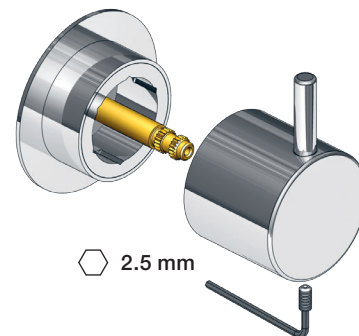


NR 52

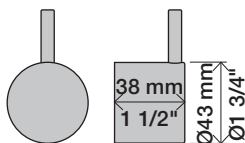

NR 52 - 1

VR5278

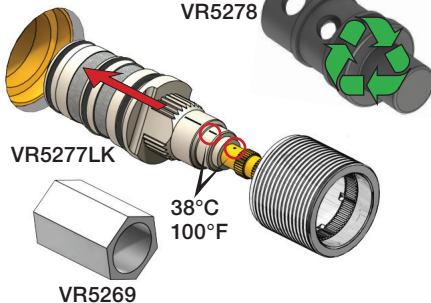


NR 52 - 2

VR2279


VR2279B

VR2279C

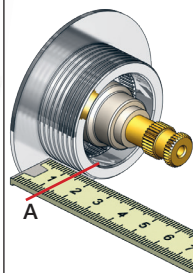

	A	
VR2279	16 mm	16 - 22 mm
VR2279B	12 mm	12 - 18 mm
VR2279C	8 mm	8 - 15 mm

NR 64

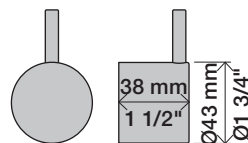


NR 64 - 1

VR2279

VR2279B


VR2279C

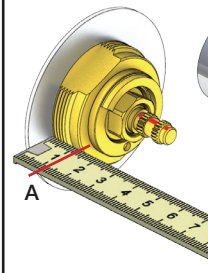


	A	
VR2279	16 mm	16 - 22 mm
VR2279B	12 mm	12 - 18 mm
VR2279C	8 mm	8 - 15 mm

NR 52 - 3

Anti scald settings
Verbrühschutz
Skoldningssikring
Skållnings skydd
Broeien verzekeringen
Prévention des brûlures

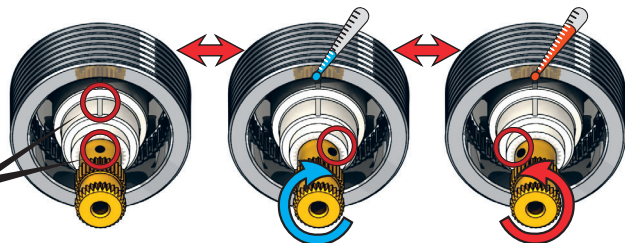
38°C
100°F

NR 52 - 4

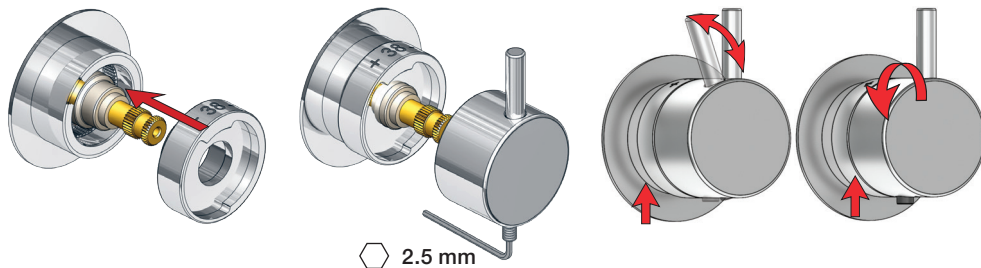

NR 64 - 2

5400

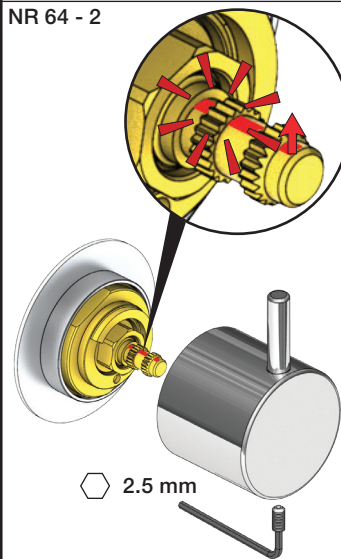



5400VA3

5400VA4

5400V

Exploded view diagram of a 5400V electrical component assembly. The diagram shows the main housing (5277LK) and various internal and external components. Key parts labeled include:

- 5400V (Main assembly label)
- 1902 (Terminal block)
- 968 (Mounting bracket)
- 5268 (Internal component)
- 5271+ (Internal component)
- 5410 (Internal component)
- 2C (Internal component)
- 5270 NV32 (Internal component)
- 5250 (Internal component)
- 5249 (Internal component)
- 5248 (Internal component)
- 2279/B/C (Internal component)
- 5272 (Internal component)
- 5255 (Internal component)
- 5262 (Internal component)
- 5256 (Internal component)
- Nr.64 (Internal component)
- 2A* (Internal component)
- Nr.52 (Internal component)
- 5411 (Internal component)
- 969 (Internal component)
- 5269 (Internal component)
- Nr.51 (Internal component)
- 2A* (Internal component)
- 3110 (Internal component)
- 3109 (Internal component)
- 2A* (Internal component)
- 2279B (Internal component)
- 2279 (Internal component)
- 972 (Internal component)
- x8 (Quantity)

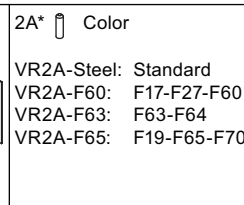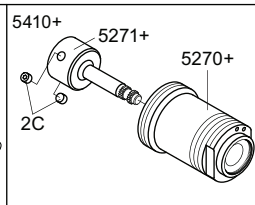

5400NV
5400TV

2930

5400DV

Diagram showing the 5400DV valve assembly and a separate plate labeled 2934.

5004B

5004L

3x2001, 001

©
3x2001, 001

©
2001



Date
May 22

Rev. 5

Sheet
SB 10.54